




Acer Iconia A110 Motherboard Replacement

This guide will lead you step-by-step through how to remove the Iconia A110 Motherboard.

Written By: Andrea

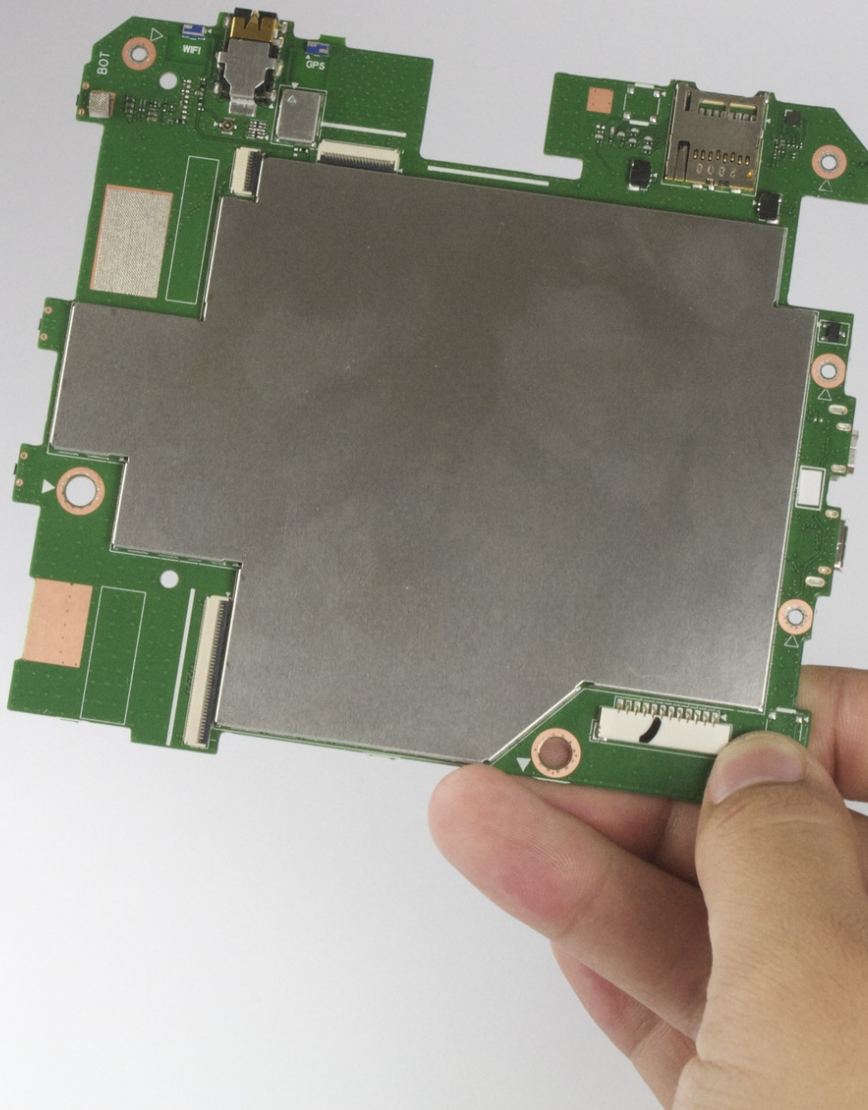

INTRODUCTION



The removal of the Motherboard is one of the initial steps in completely taking apart this tablet and is a moderately difficult process.





TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
 - [Tweezers](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

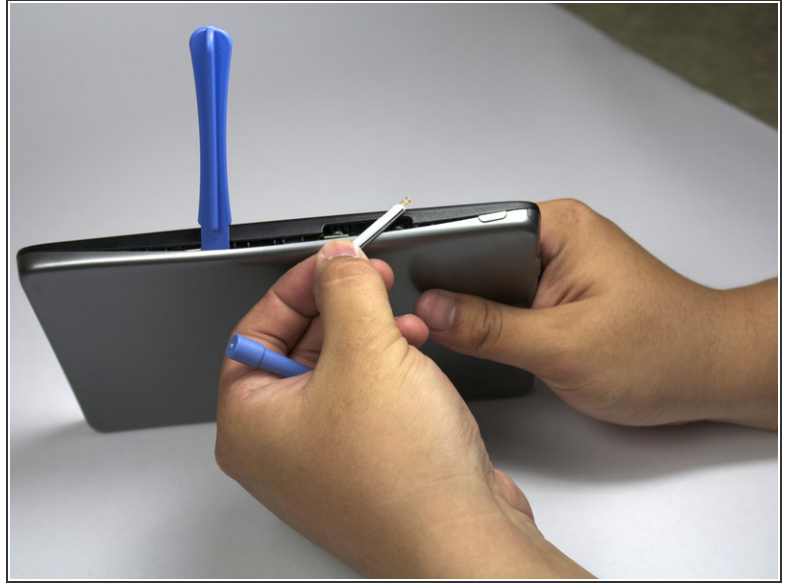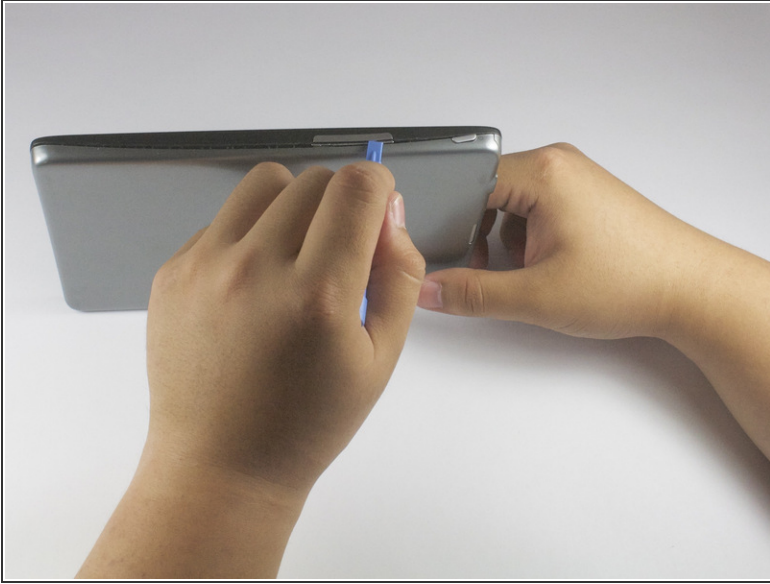
Step 1 — Battery



 Before taking apart your tablet, make sure the device is powered off.


- Pry open the right side of case with the plastic opening tool. If necessary, keep a tool lodged into the side to keep the case from closing.
-  During this process, the volume button and/or power button may fall out.

Step 2

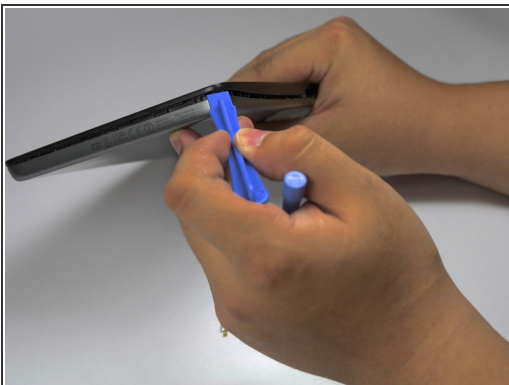


- Pry open the left side of the case with a plastic opening tool. The backside of the tablet should now separate completely from the front.

Step 3

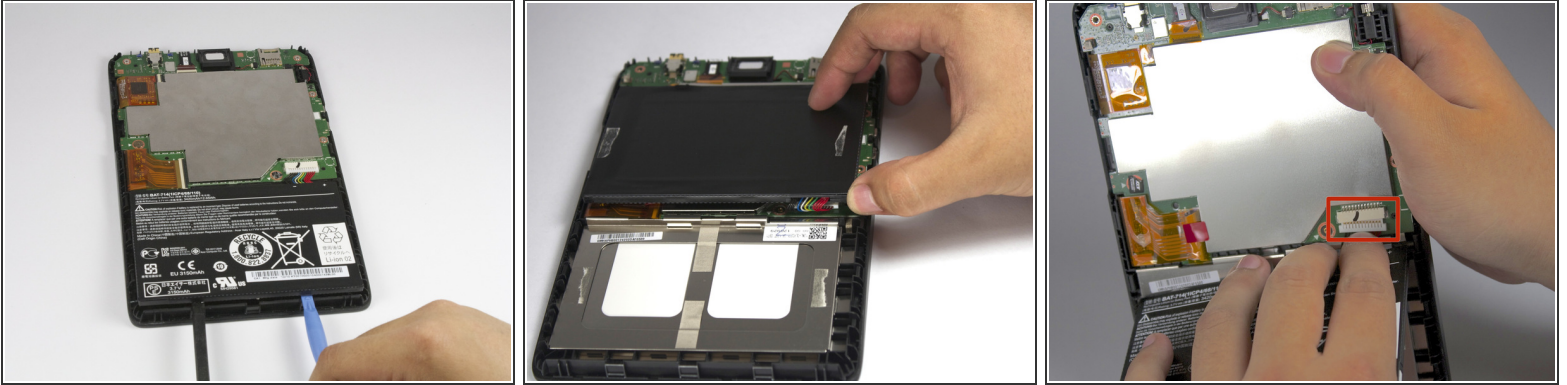



- Using the plastic opening tool and spudger, carefully pry up the battery from the case.
- ⓘ You should hear the adhesive ripping as you do this.
- Once the battery is no longer adhered to the case, detach the dongle that connects the battery to the motherboard.

Step 4 — Speaker

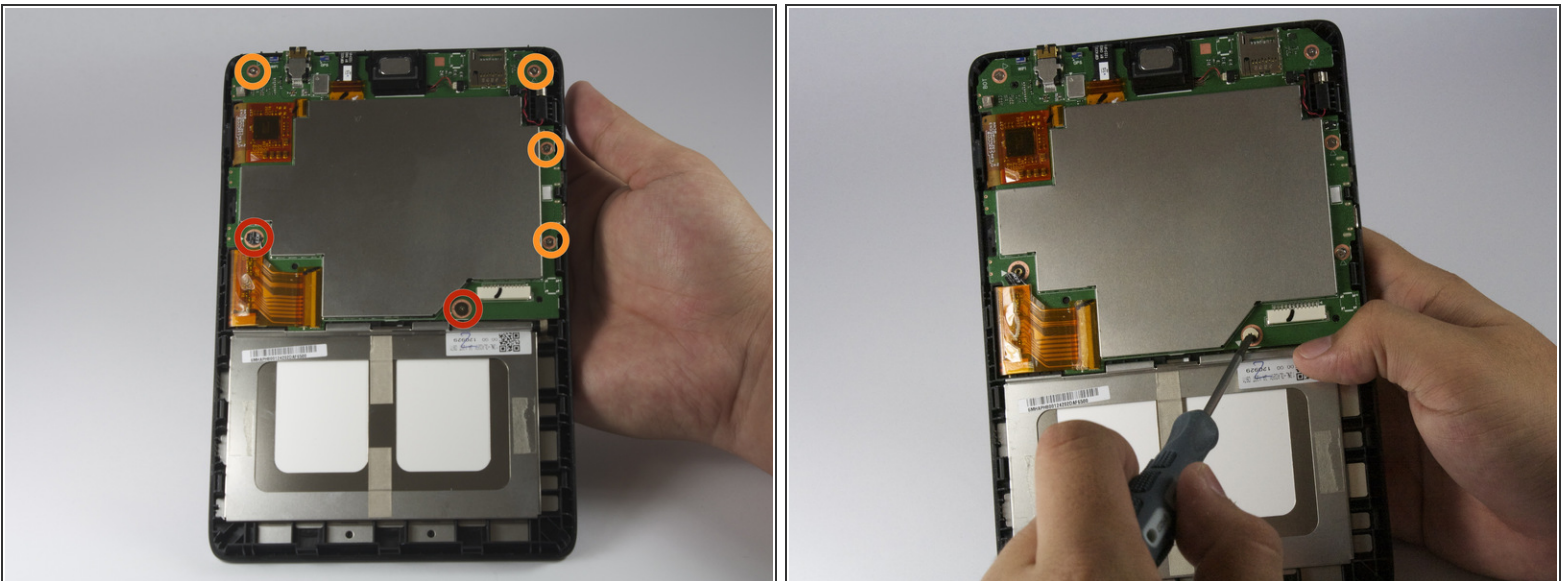



- With the Phillips #00 screwdriver, remove the following screws securing the motherboard to the back panel:
 - Two 2.0 mm screws (with the bigger head)
 - Four 2.5 mm screws (with the smaller head)

Step 5

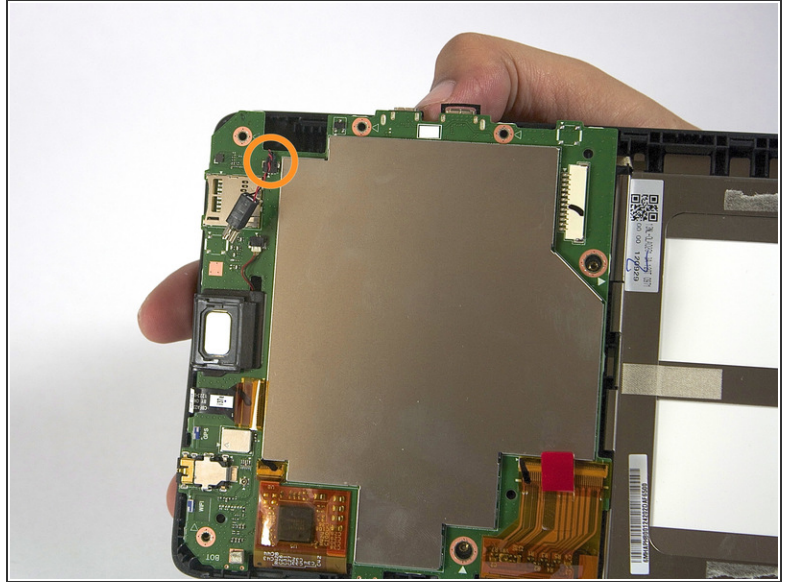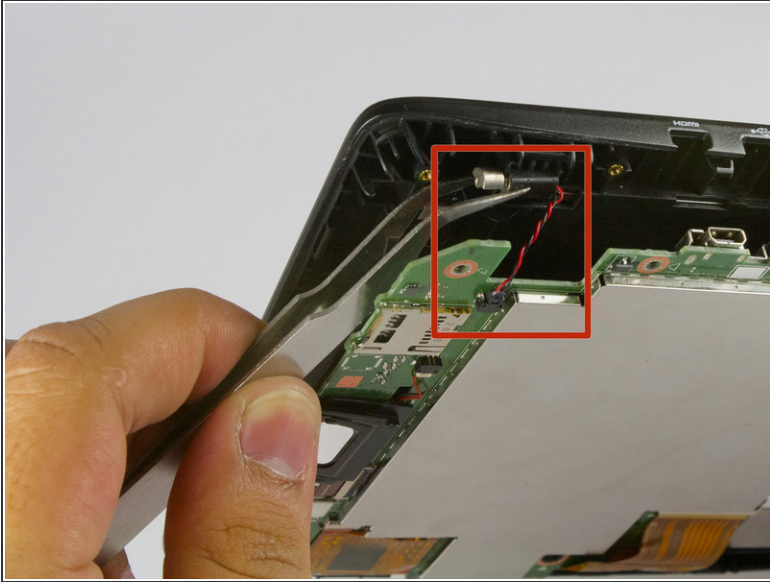




- On the top right side of the motherboard, is the vibration motor. With tweezers, carefully pull the vibration motor out from underneath the motherboard.
- ⚠ The vibration motor is still connected to the motherboard by a small wire connection, so be careful not to rip the wire out.
- With your fingers, carefully disconnect the cable securing the vibration motor to the motherboard. Set aside.

Step 6

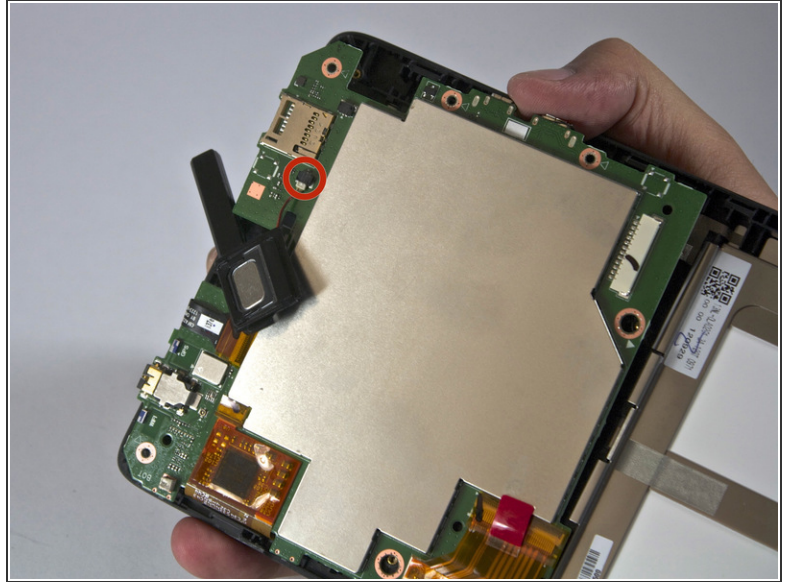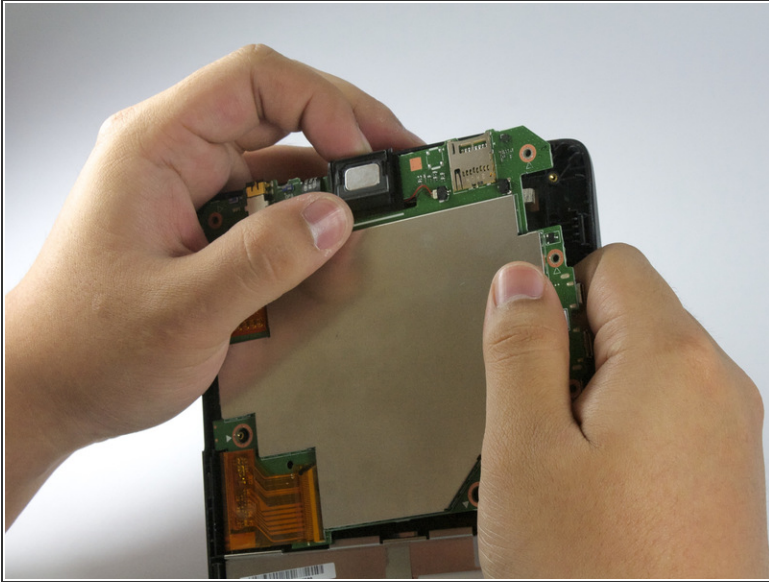




- The speaker located on the top of the motherboard should easily slide out. Take note that there is still a wire connected, so do so carefully.
- With your fingers, slowly pull out the wire connecting the speaker to the motherboard.

Step 7 — Motherboard

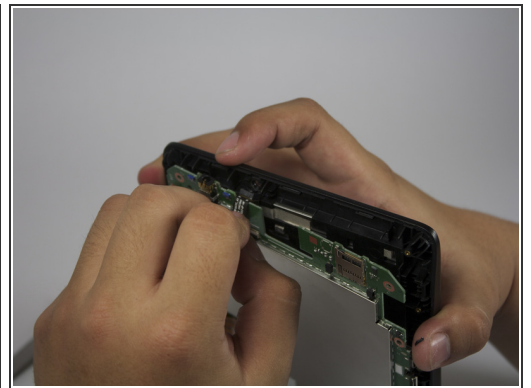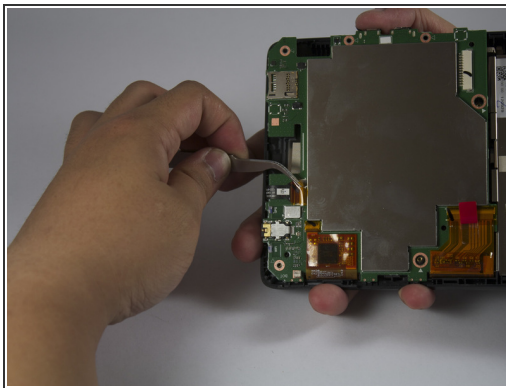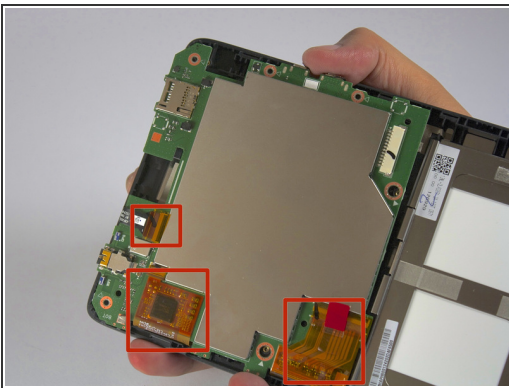

- The next step is to pull out the ribbon cables connected to the motherboard.
 - Each ribbon cable has a sticker covering it; peel it off with tweezers.
 - Use tweezers to pull out the ribbon cable.
- ⚠ Make sure to pull the ribbon cable horizontally, not vertically to avoid tearing the ribbon

Step 8

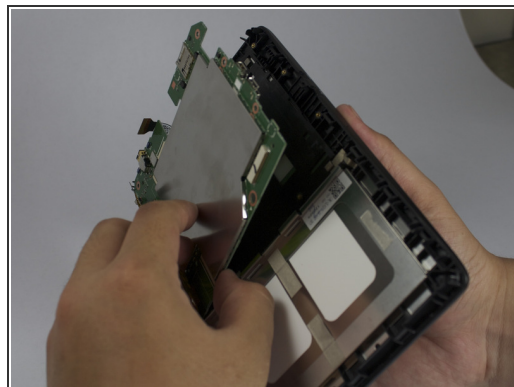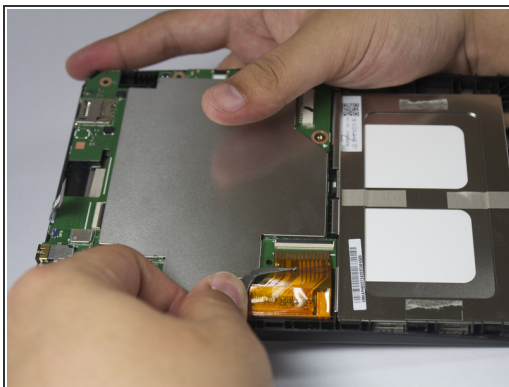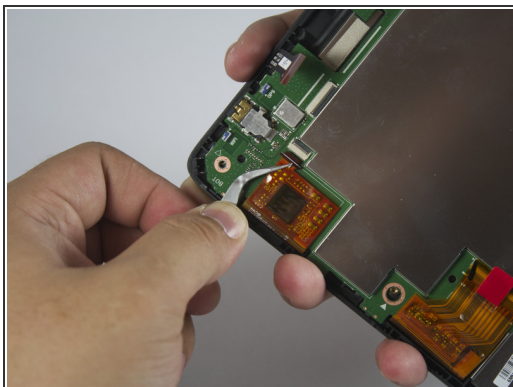

- After all ribbon cables are disconnected, move them out of the way, and the motherboard should fall out easily.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 02:10:43 PM.